


Side View

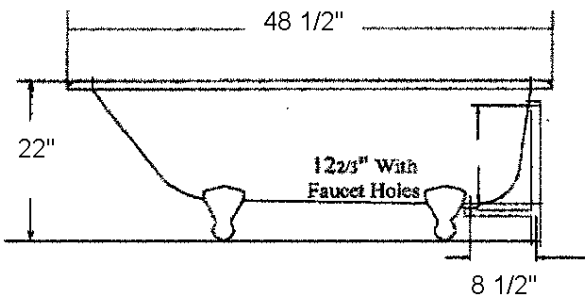

INSTALLATION INSTRUCTIONS

P0007 Waste and Overflow

P0011 Leg Tub Supply Set

For P0011 Supplies, rough in 1/2" male IPS with 1/2" of threads above the finished floor.

For Drain, rough in 1 1/2" male IPS with 1" of threads above the finished floor.

For P0342 Leg Tub Supplies, rough in 1/2" male IPS with 1 1/2" of threads above the finished floor.

The rough-in for the drain hole on the floor is a plumb line from the center of the roll rim on the tub to the floor. Use the 1 1/2" x 1 3/8" square cut washer included in all our leg tub waste and overflow sets to fit our original, authentic sets to modern plumbing.